

EXIS Touch Panel (Dimming)



EXIS



F1



Receiver

Manual

www.ltech-led.com

Technical Specs

EX1S Dimming Touch Panel

Input Voltage:	100~240Vac	Dimensions:	L86×W86×H36(mm)
Output Signal:	RF 2.4GHz, DMX512	Package Size:	L113×W112×H50(mm)
Working Temp.:	-30°C~55°C	Weight(G.W.):	225g

F4-3A CV Receiver

Input Voltage:	5~24Vdc	Working Temp.:	-30°C~55°C
Current Load:	3A × 4CH Max. 12A	Dimensions:	L125×W33×H20(mm)
Max Output Power:	60W/144W/288W(5V/12V/24V)	Package Size:	L127×W35×H24(mm)
Wireless Signal:	2.4GHz	Weight(G.W.):	60g

F4-5A CV Receiver

Input Voltage:	5~24Vdc	Working Temp.:	-30°C~55°C
Current Load:	5A × 4CH Max. 20A	Dimensions:	L175×W44×H30(mm)
Max Output Power:	100W/240W/480W(5V/12V/24V)	Package Size:	L178×W48×H33(mm)
Wireless Signal:	2.4GHz	Weight(G.W.):	150g

F4-CC CC Receiver



Input Voltage:	12~48Vdc	Working Temp.:	-30°C~55°C
Output Voltage:	3~46Vdc	Dimensions:	L175×W44×H30(mm)
Output Current:	CC 350/700/1050mA×4CH	Package Size:	L178×W48×H33(mm)
Output Power:	1.05W~48.3W×4CH Max 193.2W	Weight(G.W.):	165g
Wireless Signal:	2.4GHz		

Note: Receiver is sold separately.




Product Size:

LTECH

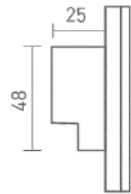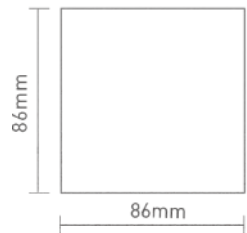


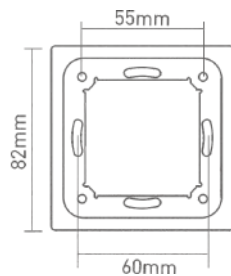

EX1S




Key Functions:

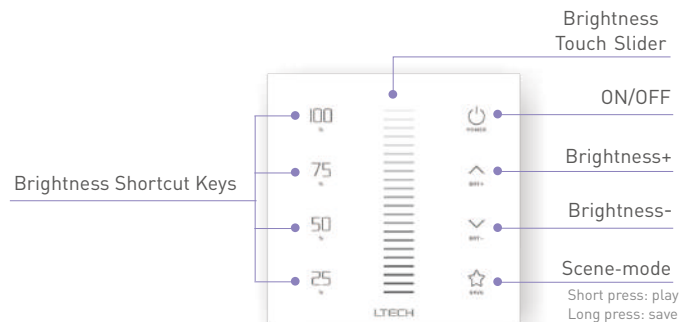LTECH




- * When the touch panel is off, Long press  to turn on/off the buzzer
- When the touch panel is on, Long press  to match code.


Terminals:

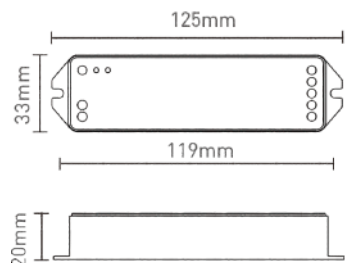

F4-3A

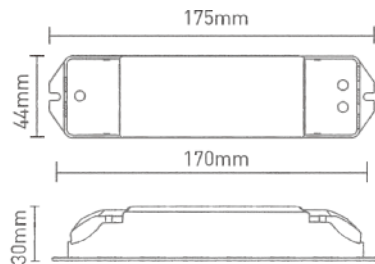


F4-5A/F4-CC

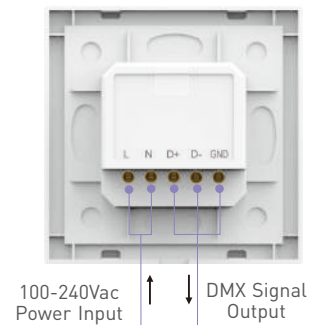


Installation Instruction:

LTECH

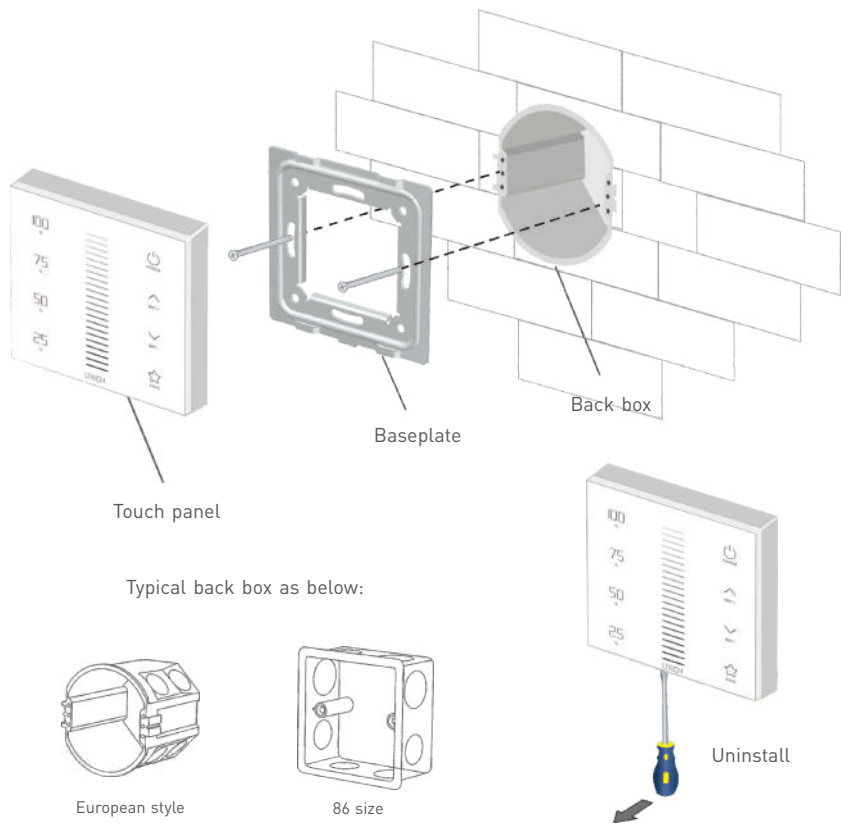


DMX Wiring:

LTECH

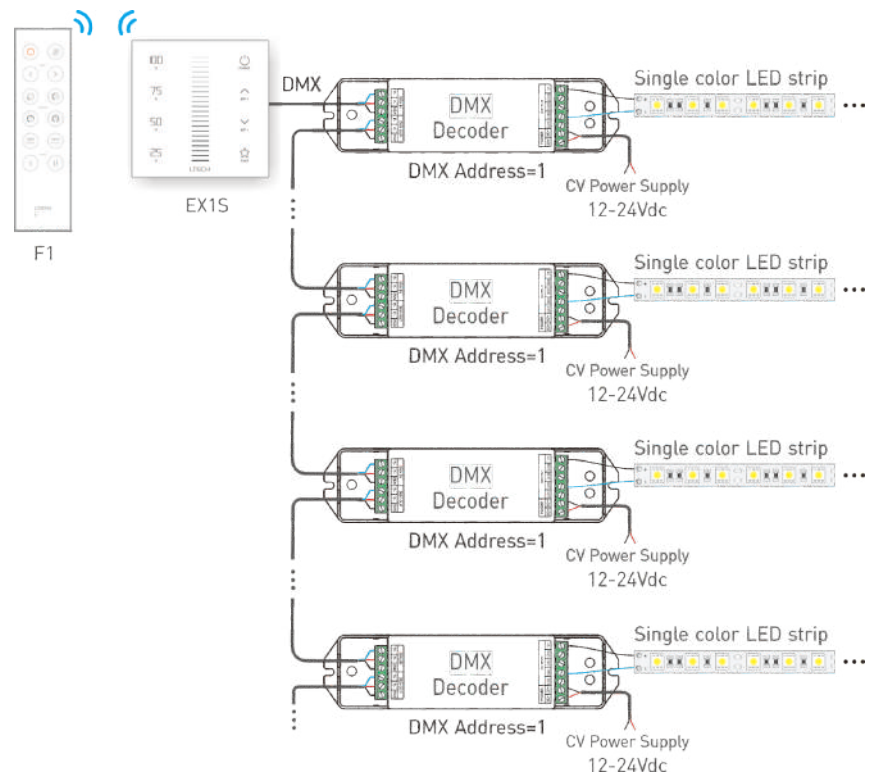


RF Wireless Wiring:

LTECH

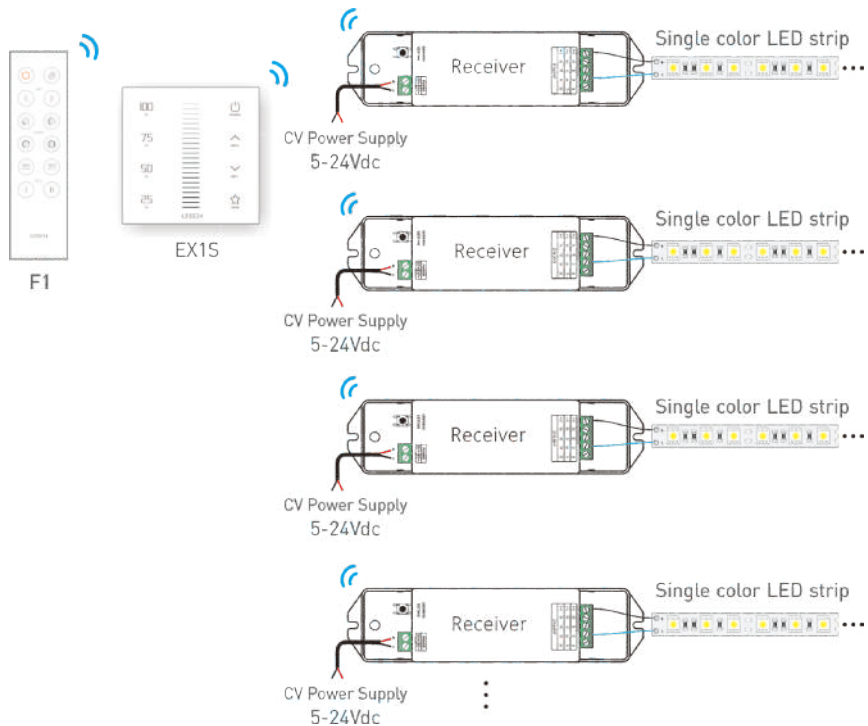

Multi-control Wiring:

LTECH

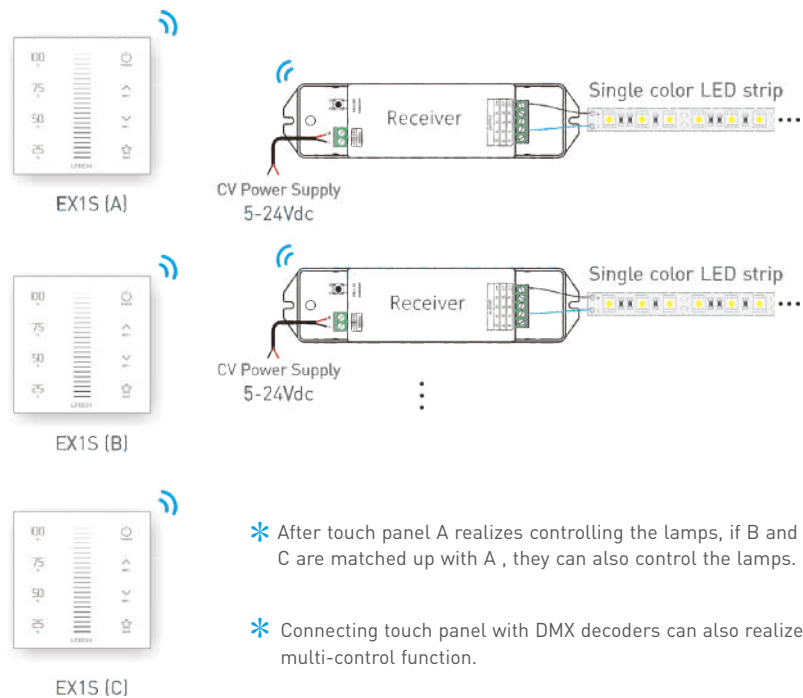

* After touch panel A realizes controlling the lamps, if B and C are matched up with A, they can also control the lamps.


* Connecting touch panel with DMX decoders can also realize multi-control function.

Match/Clear Code between Touch Panel & Receiver


LTECH



Match code:

Method 1 : When the touch panel is on and the wiring between the receiver and the lamps are correct.

- 


Receiver

Power on the receiver, and complete step 2 within 10s.
- 

Long press  on the touch panel, the lamps flicker.
- 


Touch the slider in 5s, the lamps stop flicking, match successfully.



Method 2 : When the touch panel is on and the wiring between the receiver and the lamps are correct.

- 

Receiver

ID learning button


Short press "ID learning button" on the receiver.
- 

Long press  on the touch panel, the lamps flicker.
- 

Touch the slider in 5s, the lamps stop flicking, match successfully.


Clear code:

Method 1: Power on and off the receiver continuously for 5 times, If the buzzer long beep and lamps flicker twice, deactivate the matching successfully.



Receiver

Method 2: Long press "ID learning button" on receiver for 5 seconds, If the lamps flicker twice, deactivate the matching successfully.

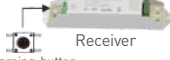


Receiver


ID learning button



Match/Clear Code between Touch Panels:

LTECH

Match code:


- 

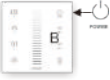

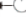Assuming that B match up with A.
- 

Long press  on B, the indicator lights of all keys keep on after release.
- 

Touch the slider on A in 5s, when the indicator lights of B turn off, match successfully.


Clear code:






Long press the two keys   on the touch panel B simultaneously (about 3 seconds) until the indicator light flicker several times, deactivate the matching successfully.

Match/Clear Code between Touch Panel & Remote:


Match code:



- 

Long press  on the touch panel, the indicator light of all keys flicker.
- 

Long press  on the remote, the indicator light stop flicking, match successfully.

Clear code:



Long press the two keys   on the touch panel simultaneously (about 3 second), if the indicator light flicker 3 times, deactivate.